 


An IDEAL: Company

3 Position Mini PL SPEC Pak[®] Jam Nut (female) Assembly Instructions



Tools & supplies you will need:

- Wire strippers
- Wire lubricant
 Crimp tool(a)
- Crimp tool(s)Insertion tool
- Extraction tool
- Wrench

Step 1 Wire Protection

- a. Strip approximately 0.75 inches (19 mm) from the outer cable jacket, if applicable. For jacketed cable strip approximately 1.2 inches (30 mm).
- b. If using the optional wire sealing grommets, lubricate individual wires using Isopropyl alcohol. **WARNING:** Dry thoroughly before energizing the circuit. Follow all cautions on the lubricant container.
- c. If not using optional wire sealing grommets, go to Step 2.
- d. Slide wire sealing grommet on to each wire with the smaller diameter of the sealing grommet facing the wire side that will be terminated. (See figure 1)

Step 2 Prepare Wires

a. Strip individual wires, taking care not to damage the copper conductor. (See Table 1)

Table 1 (See figure 2).

APP Contact			Instruction
Part Number	X Inches	X (mm)	Sheet
PM16S2024S32	Wire Insulation OD < crimp barrel ID		1S6420
PM16S1620S32	x = 0.21" (5.5mm)		
PM16S1416S32	. Wire Insulation OD > crimp barrel ID x = 0.28" (7.0mm)		
PM16S12S32			

Step 3 Crimp Contacts

a. Crimp contacts per crimp tool instructions. (See Table 2)
 WARNING: APP tooling is required for UL and CSA compliance. Use of unapproved tooling will void the connector warranty.

Table 2

APP Contact Part Number	Wire Size	Hand Tool Part Number	Instruction Sheet	Please inquire for additional tooling options:
PM16S2024S32	24 – 20 AWG			
	0.25 – 0.50 mm ²			
PM16S1620S32	20 – 16 AWG			
	0.50 – 1.30 mm ²	PM1000G1	1S6497	Pneumatic
PM16S1416S32	16 – 14 AWG		100407	Theamatic
	1.30 – 2.10 mm ²			
PM16S12S32	12 AWG			
	3.30 mm²			



 


Figure 2

3 Position Mini PL SPEC Pak[®] Jam Nut (female) Page 2

Step 4 Populate Shell

- a. Slide the jam nut down the wires with the threads facing the wire ends. Continue passing the wires through the panel cut-out. (See figure 3)
- b. On the other side of the panel cut out, place the gasket over the threads and on to the connector shell.
- c. Insert the contact from the rear side of the connector, using insertion tool part number PM1002G1. (See figure 4)
 - i. **NOTE:** A tactile snap will be felt when contacts are properly inserted. Apply a slight tug on the wire(s) to confirm that the contact(s) are properly inserted. If using discrete wires, the wires will spin freely when properly inserted in the housing.
 - ii. **NOTE:** If necessary, contacts can be extracted by using extraction tool part number PM1003G1.
 - Slide tool over the contact until the tool bottoms on the housing. (See figure 5)
 - 2. Push the button on the top of the tool with your thumb while gently pulling on the wires from the back of the connector.
 - 3. Contact will be released.
- d. Repeat Step 4a as necessary.

Step 5 Final Assembly

- a. If not using the optional wire sealing grommet, go to step 5c.
- b. If using optional wire sealing grommet, slide the individual grommet down each wire and into the connector until flush with the back of the connector. (See figure 6) Snap the grommet retainer on to the connector, covering the wire sealing grommets (See figure 7)
- c. Align the connector shell with the panel cut-out and slide the connector into the panel.
- d. Slide jam nut on the back of the connector and hand tighten.
- e. Wrench (22mm wrench or strap wrench) tighten the jam nut 1/8 1/4 turn more.



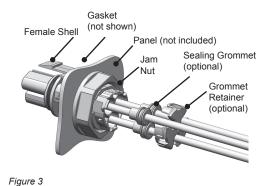
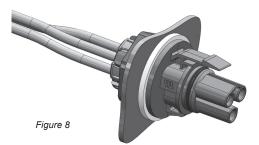






Figure 5



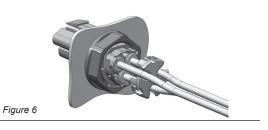




Figure 7

All Data Subject To Change Without Notice

"SPEC Pak, Anderson Power Products, APP & A, are registered trademarks of Anderson Power Products"

15742, 1S6606 REV 01

HEADQUARTERS: Anderson Power Products®, 13 Pratts Junction Road, Sterling, MA 01564-2305 USA T:978-422-3600 F:978-422-0128 • EUROPE: Anderson Power Products® Ltd., Unit 3, Europa Court, Europa Boulevard, Westbrook, Warington, Cheshire, WAS TTN United Kingdom T: +44 (0) 1925 428300 F: +44 (0) 1925 520203 • ASIA / PACIFIC: IDEAL Anderson Asia Pacific Ltd., Unit 922-928 Topsail Plaza, 11 On Sum Street, Shatin N.T., Hong Kong T:+(852) 2636 0836 F:+(862) 2635 9036 • CHINA: IDEAL Anderson Technologies (Shenzhen) Ltd., Block A8 Tantou Western Industrial Park, Songgang Baoan District, Shenzhen, PR. China 518105 T: +(86) 755 2768 2118 F: +(86) 755 2768 2218 • TAIWAN: IDEAL Anderson Asia Pacific Ltd., Taiwan Branch, 4F.-2, No.116, Dadun 20th St., Situn District, Taichung City 407, Taiwan (R.O.C.) T: +(886) 4 2310 6460 • WWW.andersonpower.com